



RECIRCULATION WITH AQUASTAT CONTROL

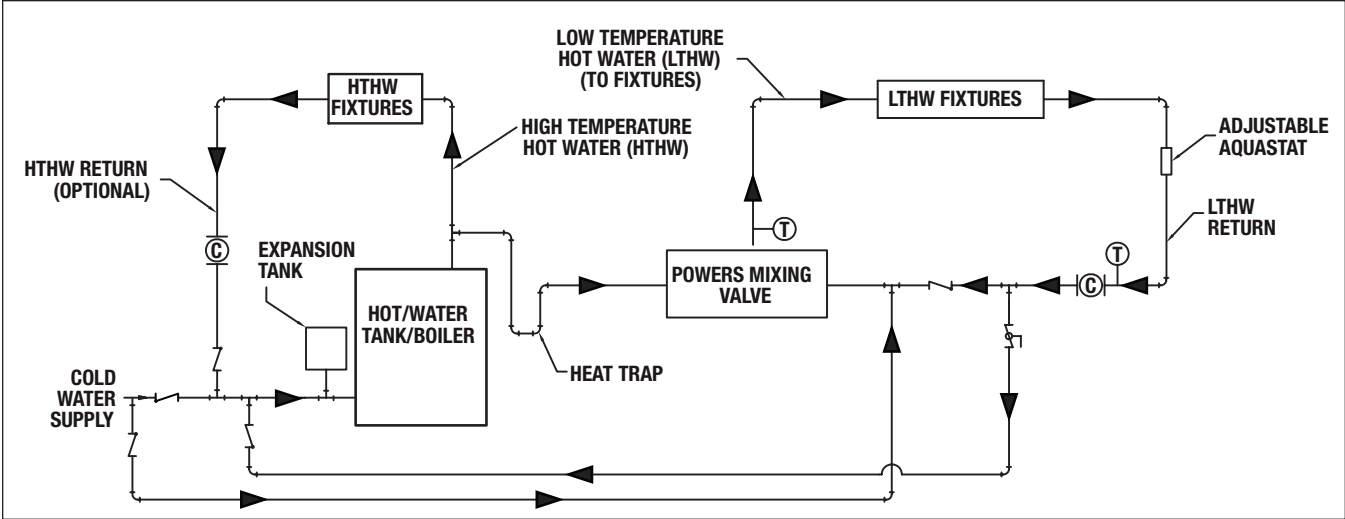


CONTINUOUS RECIRCULATION

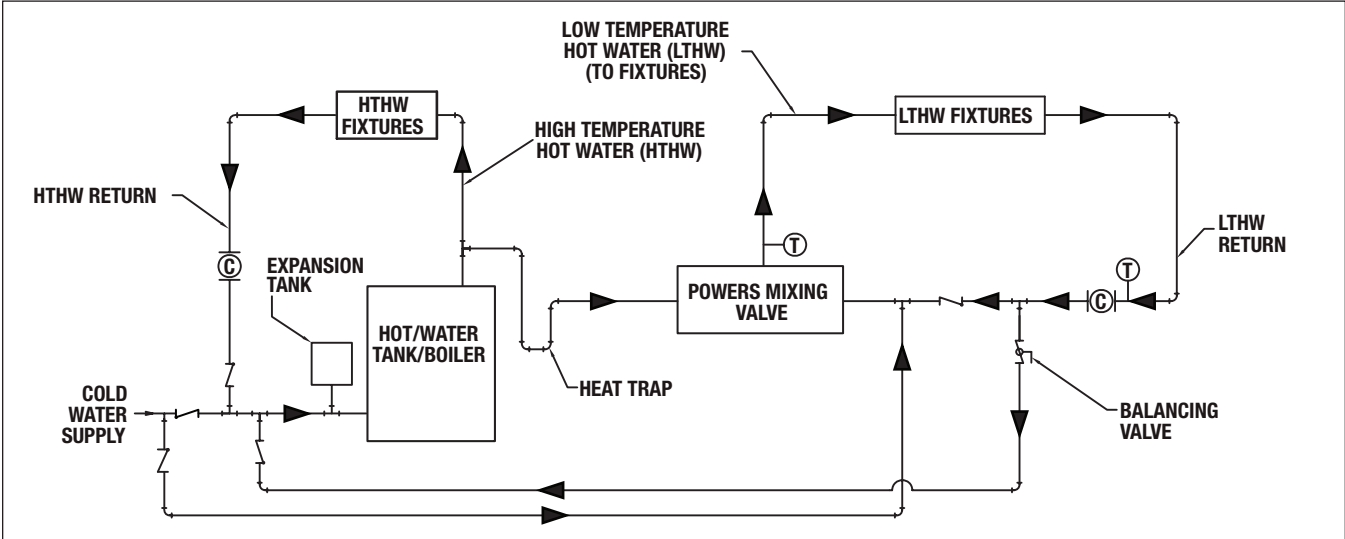

© Select flow rate as necessary to ensure Powers mixing valve is operating at an ASSE 1017 minimum certified flowrate. See Literature.

⊕	TEMP/PRESSURE GAUGE
▶	FLOW DIRECTION
∨	CHECK VALVE
⌘	BALANCING VALVE
⌘	AUTOMATIC BALANCING VALVE
Ⓢ	CIRCULATOR

CONTINUOUS RECIRCULATION*

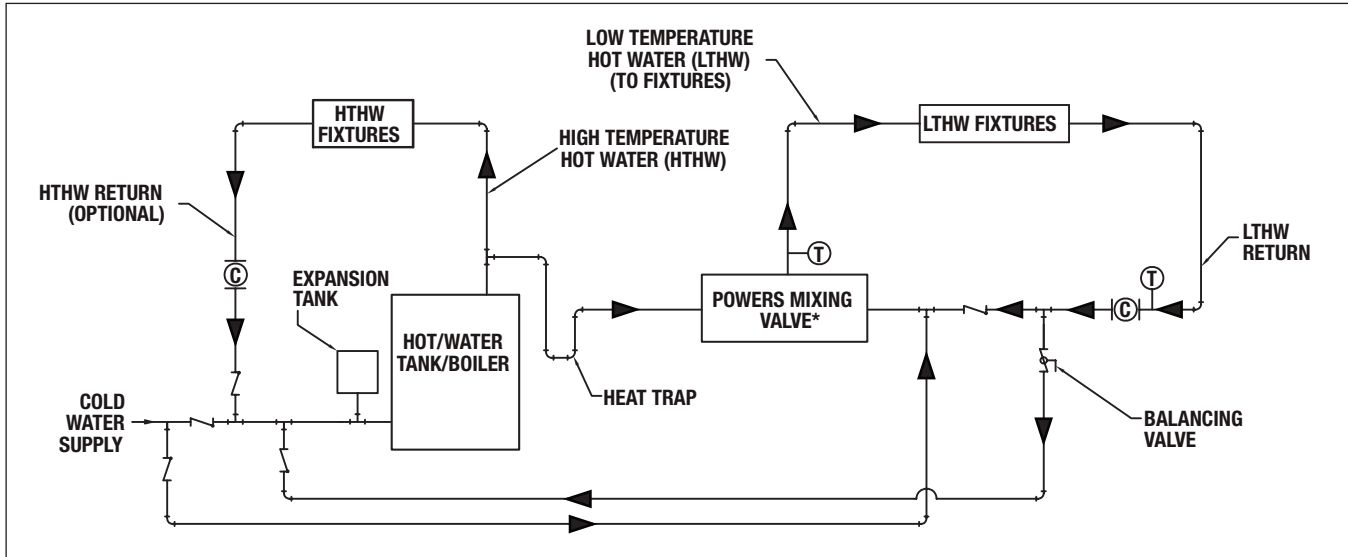

*MUST RUN RECIRC PUMP CONTINUOUSLY WHEN REQUIRED MINIMUM FLOW IS LESS THAN OR EQUAL TO THE VALVE MINIMUM FLOW (REFER TO LITERATURE).

	TEMP/PRESSURE GAUGE
	FLOW DIRECTION
	CHECK VALVE
	BALANCE VALVE
	CIRCULATOR